

Voting with a Touchscreen Ballot on the ClearAccess™ system

Contest Screen

Touch [Settings](#) for Magnification, Color/Contrast, Audio ballot playback, and Visual Ballot Display

Touch the box to the left of the candidate's name to make a selection, touch again to deselct your choice

Touch the box to the left of the [Write-In](#) option to prompt the Write-In Screen

The Contest Screen displays a list of candidates for the U.S. Representative position in the 10th Congressional District. At the top, there are buttons for Settings, Help, Cancel, and Review votes. Below the title "Federal - Partisan Office", the text reads "U.S. Representative" and "10th Congressional District. You can choose no more." The candidates listed are Joyce McDonald (Republican Party), Denny Heck (Democratic Party, selected with a checkmark), Sam Wright (The Human Rights Party), and Jennifer Gigi Ferguson (Independent Party). There is also a "Write-in" option. At the bottom, there are buttons for Pause, Slower, Faster, Volume Up, Volume Down, Back, Page 1 of 8, and Next.

Touch [Help](#) for Voting Instructions

Touch [Cancel](#) to Cancel the voting session

Touch [Review Votes](#) to view the Ballot Review Screen

Touch [Back](#) to return to the previous screen

Touch [Next](#) to go to the next contest

Write-In Screen

Touch the letters to enter the Write-In candidate's name and touch [Accept](#)

The Write-In Screen prompts the user to "Write-in a name for U.S. Representative". It includes instructions: "Use this screen to vote for a person who is not on the ballot." and "To finish, touch Accept. If you change your mind, touch Cancel". A text input field contains the name "Mary". Below the input field is a virtual keyboard with letters, numbers, and symbols. At the bottom right, there are buttons for Accept and Cancel.

Review Screen

Touch a contest to return to that contest screen to vote or edit choice.

Touch to scroll down and see more contests

The Review Screen displays a list of contests that the user has voted for. At the top, there are buttons for Settings, Help, and Cancel. The text reads "Review what you're voting for" and "This screen shows everything you voted for. To make changes touch the Back button below." Below this, there are four contests listed: "Prosecuting Attorney", "County Council District No. 1", and "Position No. 8". Each contest has a "No selection made. Click here to vote." link. At the bottom, there are buttons for Pause, Slower, Faster, Volume Up, Volume Down, Back, Summary, and Print.

Touch [Print](#) to print ballot

Voting with the Keypad on the ClearAccess™ system

 
Contest Screen



Press to access [Settings](#) screen to change Magnification, Color/ Contrast, Audio ballot playback, and Visual Ballot Display



Press up arrow for previous choice and down for next choice

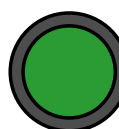

Press enter to select or deselect a choice or to access the [Write-In Screen](#)

The screenshot shows the 'Contest Screen' for 'Federal - Partisan Office' and 'U.S. Representative' in the '10th Congressional District'. It lists four candidates: Joyce McDonald (Republican Party), Denny Heck (Democratic Party, selected with a checkmark), Sam Wright (The Human Rights Party), and Jennifer Gigi Ferguson (Independent Party). There is also a 'Write-in' option. At the bottom, there are navigation buttons: 'Pause ||', '<< Slower', 'Faster >>', 'Volume Up', 'Volume Down', 'Back', 'Page 1 of 8', and 'Next'.

Press to access the [Help](#) screen for Voting Instructions



Press to skip to the previous contest. Hold for one second to [Cancel](#) voting session



Press to skip to the next contest. Hold for one second to [Review](#) votes



Write-In Screen

The screenshot shows the 'Write-In a name for U.S. Representative' screen. It includes instructions: 'Use this screen to vote for a person who is not on the ballot. To finish, touch Accept. If you change your mind, touch Cancel'. A text input field contains 'Mary'. Below the input field is a QWERTY keyboard. At the bottom right are 'Accept' and 'Cancel' buttons.



Press to reach a desired character



Press to accept letter and continue to next character



Press to accept Write-In choice


The Shift Key



The shift key changes button behaviors when pressed at the same time as the following:



Increases/decreases volume

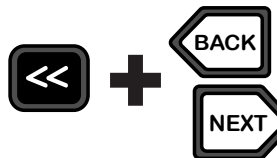

Increases/decreases speech playback rate



Pauses/resumes speech playback



Skips to the next sentence



Skips back to the previous sentence

Review Screen

The screenshot shows the 'Review Screen' with the heading 'Review what you're voting for'. It states: 'This screen shows everything you voted for. To make changes touch the Back button below.' There are four contests listed: 'Prosecuting Attorney', 'County Council District No. 1', and 'Position No. 8', each with a 'No selection made. Click here to vote.' message. At the bottom, there are navigation buttons: 'Pause ||', '<< Slower', 'Faster >>', 'Volume Up', 'Volume Down', 'Back', 'Summary', and 'Print'.



Press to scroll and review votes




Press to return to selected contest



Press to [Print](#) Ballot

Voting with the Sip and Puff on the ClearAccess™ system

Contest Screen

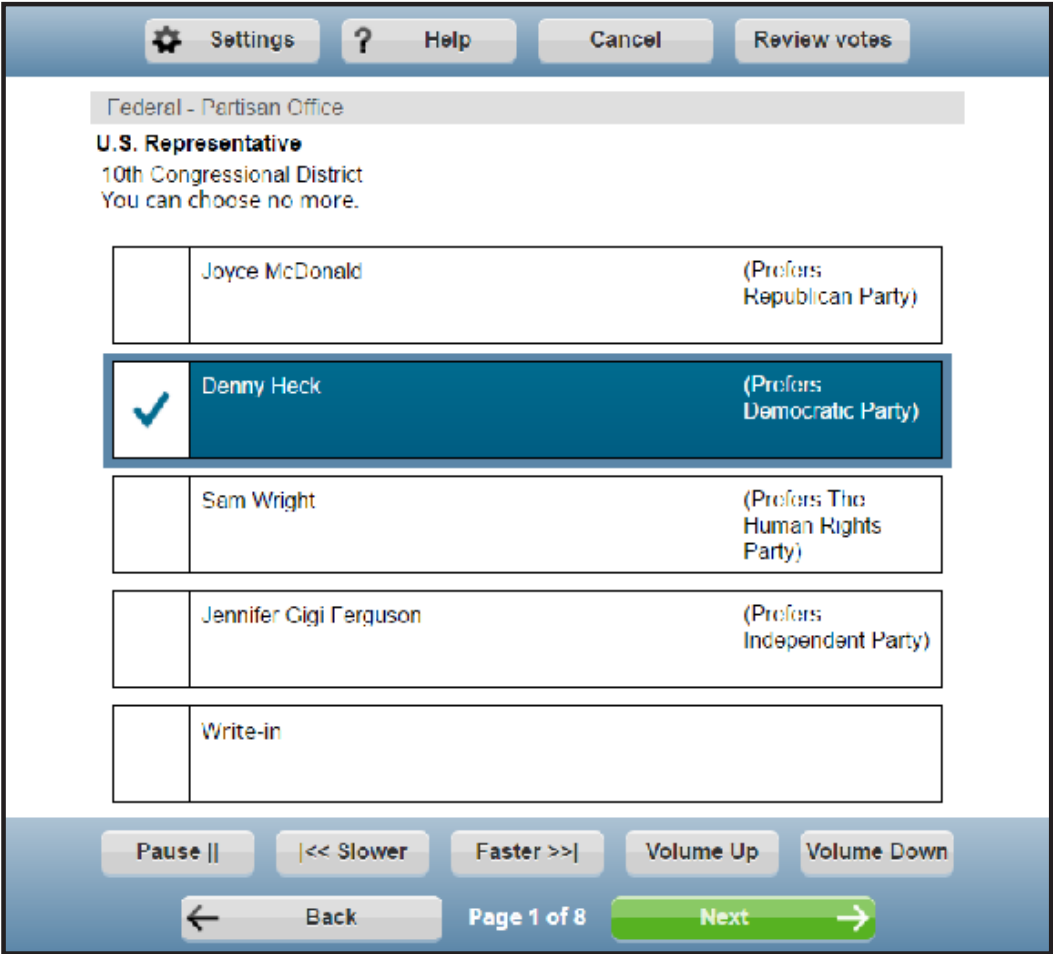

Triple Puff
Access [Settings](#):
Magnification, Color/
Contrast, Audio ballot
playback, and Visual
Ballot Display

Single Puff
Go to next choice

Single Sip
Return to previous choice

Long Puff*
Select or deselect a
choice, or to access the
[Write-In](#) Screen


Long Sip*
Access [Help](#) screen

Triple Sip
[Cancel](#) the voting
session

Double Sip
Go to previous contest

Double Puff
Go to the next contest

Write-In Screen

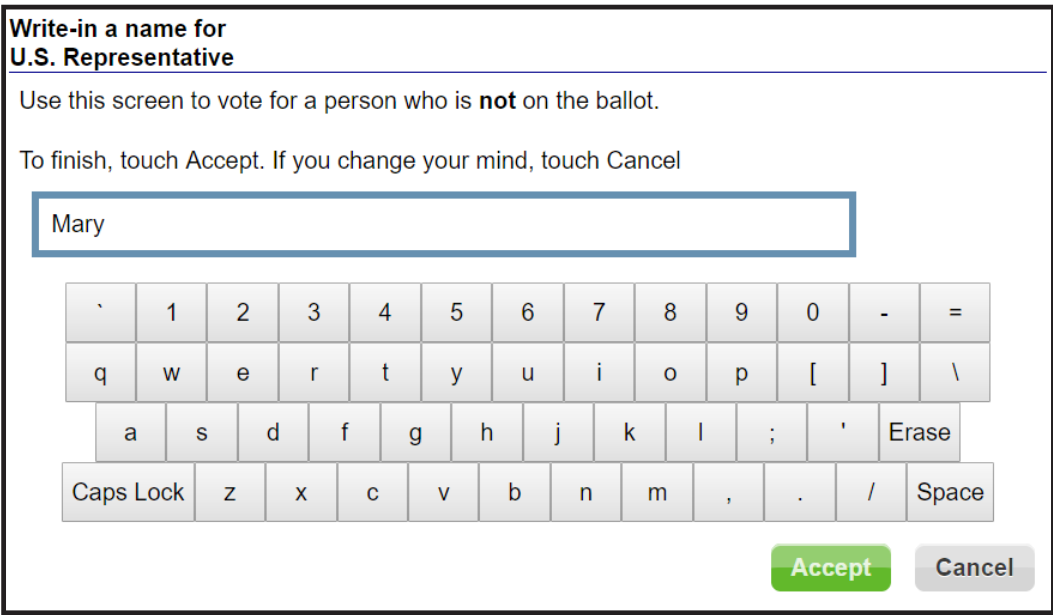

Single Puff
Scroll through
characters

Double Puff
Accept letter and
continues to next
character

Long Puff*
Accept the Write-In
candidate's name

Review Screen



Single Sip
Advance through the
contest and candidate list

Long Puff*
Return to selected race on
the ballot

Double Puff
[Print](#) the ballot

*A long sip or puff is about a half-second long