



Clear Ballot

**ClearVote 2.1**

**ClearAccess Voter Guide**

---

## ClearAccess Voter Guide

Clear Ballot Part Number: 100056-10017

Copyright © 2012–2020 Clear Ballot Group. All rights reserved.

This document contains proprietary and confidential information consisting of trade secrets of a technical and commercial nature. The recipient may not share, copy, or reproduce its contents without express written permission from Clear Ballot Group.

ClearAccess, ClearAudit, Clear Ballot, ClearCast, ClearCount, ClearData, ClearDesign, ClearVote, DesignServer, DesignStation, Image-to-Ballot Traceability, MatchPoint, ScanServer, ScanStation, Speed Accuracy Transparency, Visualization of Voter Intent, Visual Verification, and Vote Visualization are trademarks or registered trademarks of Clear Ballot Group.

ScandAll PRO is a trademark of Fujitsu Limited. All rights reserved. Other product and company names mentioned herein are the property of their respective owners.

Clear Ballot Group  
2 Oliver Street, Suite 200  
Boston, MA 02109  
857-250-4961  
[clearballot.com](http://clearballot.com)

---

## Document history

Date	Description	Version	Authors
01/06/2017	Initial submission to EAC.	1.0	Nel Finberg
02/03/2017	Minor typographical and reference-related edits.	1.0.1	Nel Finberg
05/09/2017	Minor edits.	1.0.2	Nel Finberg
06/16/2017	Minor updates for vote-by-mail campaign.	1.0.3	Joni G. McNutt
10/31/2017	Updated voter cards.	1.1	Nel Finberg
01/19/2018	Vote-by-Mail campaign 2.	1.1.1	Joni G. McNutt
04/27/2018	Minor edits.	1.1.2	Mike Quigley
04/12/2019	Minor edits.	1.1.3	Mike Quigley
11/22/2019	Minor edits.	1.1.4	Joe Srednicki
12/20/2019	Added information about the Next button and reading the write-in text out loud in "Voting with a Touchscreen Ballot on the ClearAccess System."	1.1.5	Joe Srednicki
02/12/2020	Minor edits.	1.1.6	Joni G. McNutt



---

## Table of contents

Preface .....	5
Voter cards .....	6
Clear Access Sip and Puff Instructions .....	7
Clear Access Keypad Instructions .....	8



## Preface

This section defines the purpose of this document. It contains the following subsections.

- About this document
- Scope of this document
- Intended audience
- Contact us

### About this document

This document provides instructions on how to vote using the ClearAccess accessible voting system. Covered are instructions for voting using a touchscreen, keypad, and sip-and-puff device. This document is compliant with the documentation requirements of *VVSG 2005, Volume 2, Section 2.8.4*.



A ClearVote® system can comprise the ClearAccess®, ClearAudit®, ClearCast®, ClearCount® and ClearDesign® products. Jurisdictions are not required to purchase all products. You can ignore references to any ClearVote products that are not part of your voting system. Also ignore implementation options that are not relevant to your policies and procedures.

### Scope of this document

This document contains the following sections:

- [Voter cards](#)

### Intended audience

This document is intended for election officials and election staff who are responsible for operations and maintenance before, during, and after an election. This document is also used by Clear Ballot personnel who support election officials and election staff.

### Contact us

Clear Ballot Group welcomes your feedback on our documentation. Please send comments to [Documentation@ClearBallot.com](mailto:Documentation@ClearBallot.com).

If you have questions about using your ClearVote product, contact your Clear Ballot representative.

## **Voter cards**

This document contains the following single page Voter Card pullouts:

- Voting with the touchscreen on the ClearAccess system
- Voting with a sip-and-puff on the ClearAccess system
- Voting with a keypad on the ClearAccess system

# Voting with a Sip and Puff on the ClearAccess™ System

## Contest Screen

### Triple Puff

#### Access Settings:

Magnification, Color/Contrast, Audio ballot playback, and Visual Ballot Display.

### Single Puff

Go to next choice.

### Single Sip

Return to previous choice.

### Long Puff\*

Select or deselect a choice, or to access the **Write-in** Screen (below).



### Long Sip\*

Access the top menu,

### Triple Sip

**Cancel** the voting session.

### Double Sip

Go to previous contest.

### Double Puff

Go to the next contest.


## Write-in Screen

### Single Puff

Scroll through characters forwards.

### Single Sip

Scroll through characters backwards.

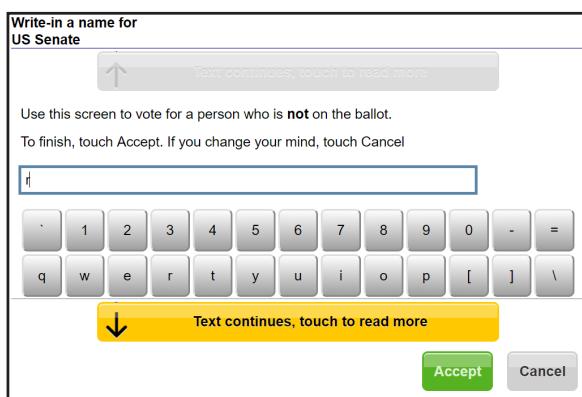


### Double Puff

Accept letter and continue to next character.

### Long Puff\*

Accept the Write-In candidate's name.

## Review Screen

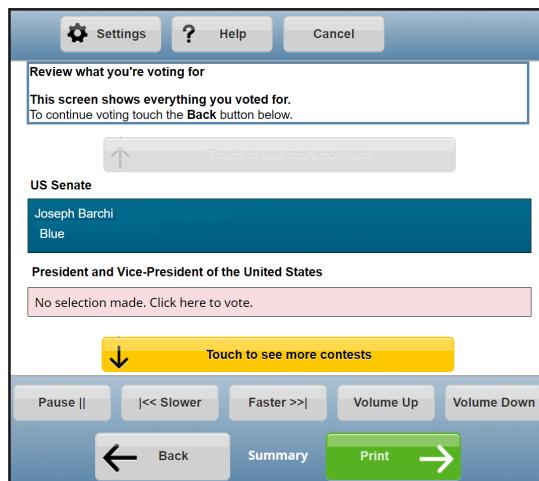

### Single Sip

Advance through the contest and candidate list.

### Long Puff\*

Return to selected race on the ballot.

### Double Puff

**Print** the ballot.

# Voting with a Keypad on the ClearAccess™ System

## Contest Screen



Press to access **Settings** screen to change Magnification, Color/Contrast, Audio ballot playback, and Visual Ballot Display.



Press up arrow for previous choice and down for next choice.



Press enter to select or deselect a choice or to access the **Write-in Screen**.



Press to access the **Help** screen for Voting Instructions.




Press to skip to the previous contest. Hold for one second to **Cancel** voting session.



Press to skip to the next contest. Hold for one second to **Review** votes.

## Write-in Screen

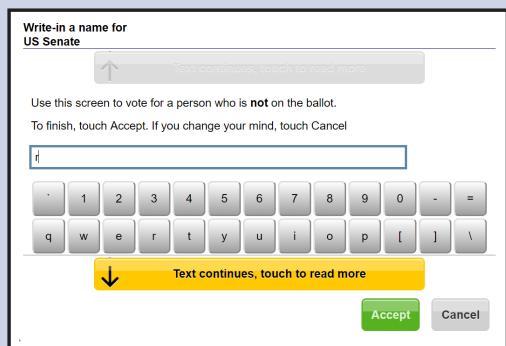

Press to reach a desired character.



Press to accept letter and continue to next character.



Press to accept Write-in choice.

## The Shift Key



The shift key changes button behaviors when pressed at the same time as the following:



Increases/ decreases volume



Increases/ decreases speech playback rate



Pauses/ resumes speech playback




Skips to the next sentence



Skips back to the previous sentence

## Review Screen

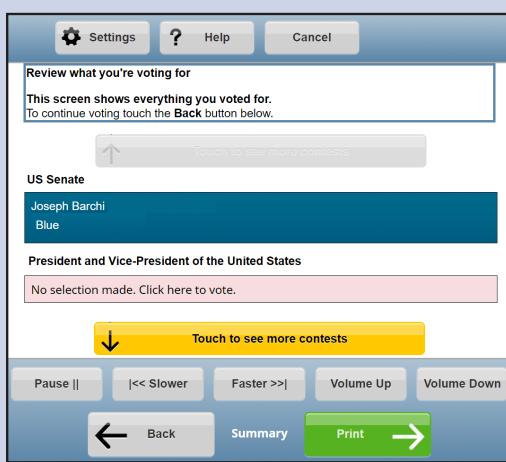

Press to scroll and review votes.



Press to return to selected contest.



Press to **Print** Ballot.